


MODEL NO.: TM-44

FOUR IN ONE TIMER WITH ALARM CLOCK

+ FEATURES:

- 4 (T1/ T2/ T3/ T4) Timers up to 99:59:59
- Count up and count down functions
- Clock with alarm and snooze settings

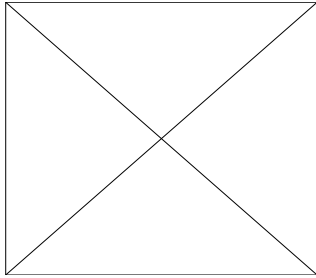

+ OPERATION:

- After battery replacement, clock begins to run from "12:00 00".

+ COUNT DOWN:

- Press T1. "T1" appears on the upper left corner and the reading is 0:0000.
- Press HR, MIN and SEC/SNZ to adjust the desired count down for T1.
- Press Start/Stop to start the count down.
- When the set time reaches, it will sound for 1 minute.
- Press any key to stop the beeping sound.
- Repeat the same procedure for T2, T3 and T4.

+ COUNT UP:

- Press T1. "T1" appears on the upper left corner and the reading is 0:0000
- Press Start/Stop to start the count up.
- Press Start/Stop to stop.
- Up to 4 timers can be set

+ TIMER OFF:

- Choose the desired Timer
- Press Start/Stop to stop counting and then press CLR/ALM. The reading returns to "0:0000"

➤ TIMER SETTINGS

- Press CLOCK. The display will turn to time mode.
 - Press and hold CLOCK for 3 seconds. The time digits will blink and it is ready for setting time.
 - Press HR and MIN to set time. Press SEC/SNZ the digits representing second will turn to zero.
 - Press CLOCK. The time digits will stop blinking and show your set time.
 - Press and hold 12/24 for 3 seconds to select time format.
-

➤ ALARM/SNOOZE SETTING:

- Press CLR/ALM. The unit will turn to alarm mode and "AL" appears on the display.
 - Press and hold CLR/ALM, then the digits blink. It is ready for setting desired alarm.
 - Press HR and MIN to adjust desired alarm time.
 - Press CLR/ALM, the digits stop blinking. Press SEC/SNZ. " " appears representing alarm function is turned on.
 - Press SEC/SNZ again. "SNZ" appears representing snooze function is turned on.
 - Press CLOCK to return to time mode. When the set time arrives, alarm sounds for one minute. Press any key to stop the alarm. After 10 minutes, it sounds again.
-

➤ ALARM CLEARING:

- Press CLR/ALM to go to alarm mode. Press SEC/SNZ. " " and "SNZ" disappears meaning alarm and snooze functions are turned off.
 - Press CLOCK to return to time mode.
-

➤ BATTERY REPLACEMENT:

- Open the battery door. Insert 1 x 1.5V G13 size or equivalent into the battery door compartment (see diagram 1)
- Screw the battery door in correct direction.
- Replace new battery when low battery indicator appears on the display.