


## CRB-22 Cleanroom Paper

- Saturated with latex which seals individual fibers into the sheet to minimize particle generation. The paper can be used for a variety of uses in the cleanroom, primarily note taking and record keeping.
- Free of inorganic fillers which allows it to accept standard inks without skipping, smudging or smearing.
- Heat resistant for use in some laser printers and photocopy machines. It will not promote damaging electro-static discharge.
- Autoclavable
- Made in the USA under rigid quality standards to insure manufacturing consistency. Converted, processed and packaged in a Class 100 environment by CCRC.

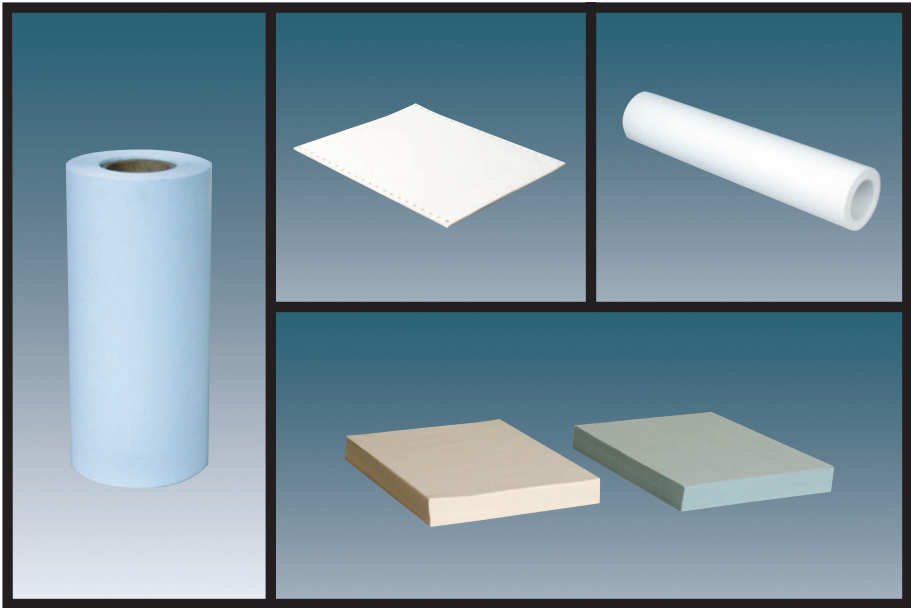


**Color:** White, Blue

*Also available in European, custom sizes and rolled goods. Sold by case only. Each ream is double-wrapped for cleanroom use.*

STYLE	SIZE	PACK
CRB22W	8.5" x 11"	250 sheets/ream, 10 reams/case
CRB22B	8.5" x 11"	250 sheets/ream, 10 reams/case
PB2C001	9.5" x 11"	1,700 continuous sheets/case



## Munising LP® Bond

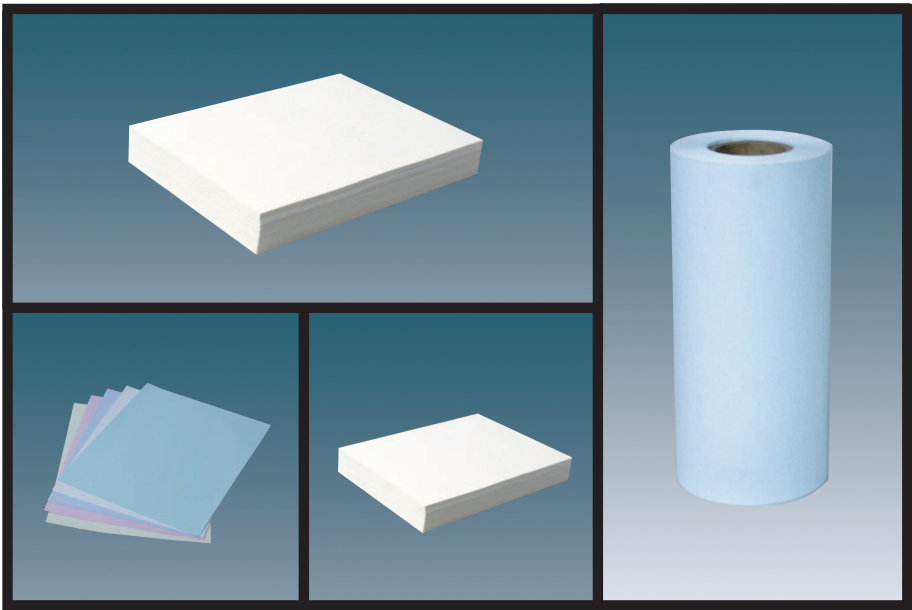

Munising LP® is manufactured by Neenah Technical Paper and is converted, processed and packaged under Class 100 conditions by CCRC.

- Saturated with latex polymers which seals individual fibers into the sheet
- Autoclavable
- Free of inorganic fillers which minimize inadvertent doping of products and accepts standard printing inks without skipping, smudging or smearing
- Heat resistant for use in laser printers and photocopy machines

**Color:** White 22.5#, 30#  
 Blue 22.5#, 30#  
 Pink 22.5#  
 Green 22.5#  
 Yellow 22.5#



STYLE	SIZE	WEIGHT	PACK
PB2S	8.5" x 11"	22.5#	250 sheets/pack 10 packs/case
PB3S	8.5" x 11"	30#	250 sheets/pack 10 packs/case

*Custom and European sizes available*

# CLEANROOM PAPER

## Cleanroom Notebooks & Binders

### Notebooks

- Each notebook contains 50 sheets (100 pages)
- College ruled or grid
- Blue or clear Polyethylene covers with poly spirals for spines
- Processed, constructed and packaged in a cleanroom environment


**Color:** 22.5# White, Blue  
30# White only

*Notebooks also sold separately.*

### Binders

- Constructed of .023 gauge polyethylene
- 1" Poly Tuff rings
- Cleanroom processed and individually packaged
- White Matte finish only

**Style:** PPMI009

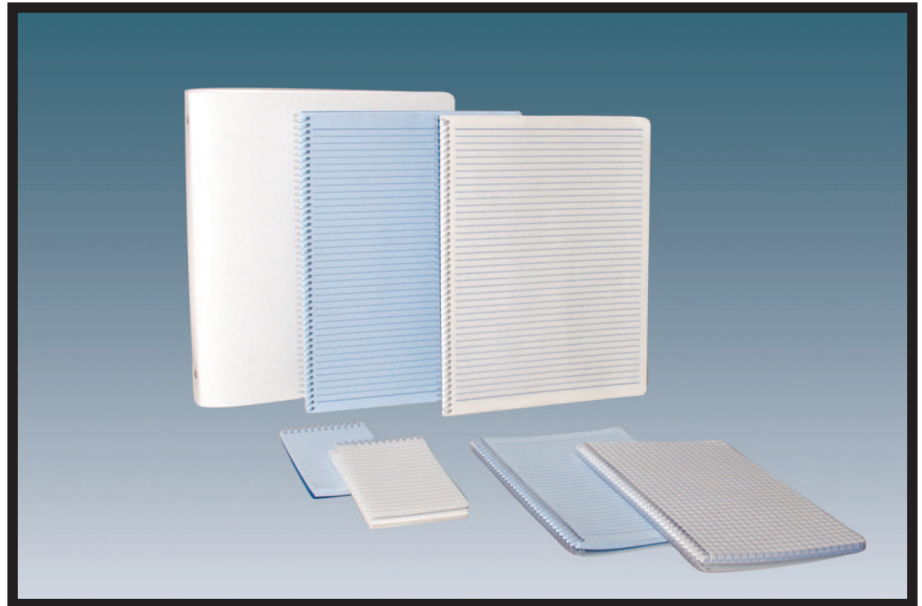

STYLE	SIZE	WEIGHT	PACK
PB2N016	8.5" x 11"	22.5#	10/case
PB2N005	5.5" x 8.5"	22.5#	20/case
PB2N025	3" x 5"	22.5#	50/case
PB3N009	8.5" x 11"	30#	10/case
PB3N010	5.5" x 8.5"	30#	20/case
PB3N013	3" x 5"	30#	50/case

## Specialty Papers



CCRC offers a full line of specialty cut products made from Munising LP® and Dupont Tyvek® as well as customer provided materials. All items are converted to customer specifications and may require minimum quantities. Ask our Customer Care Team for details.

- Munising LP® and Dupont Tyvek® are available in roll form ranging from 6" to 43" widths.
- Current products being made are wafer and disk separators, lot tags, chip tray dividers, PC board panel wrap and lapping discs.
- All specialty products are converted, processed and packaged in a cleanroom environment.

*Specialty papers are never a problem at CCRC.*

