


SPP Lab Coat

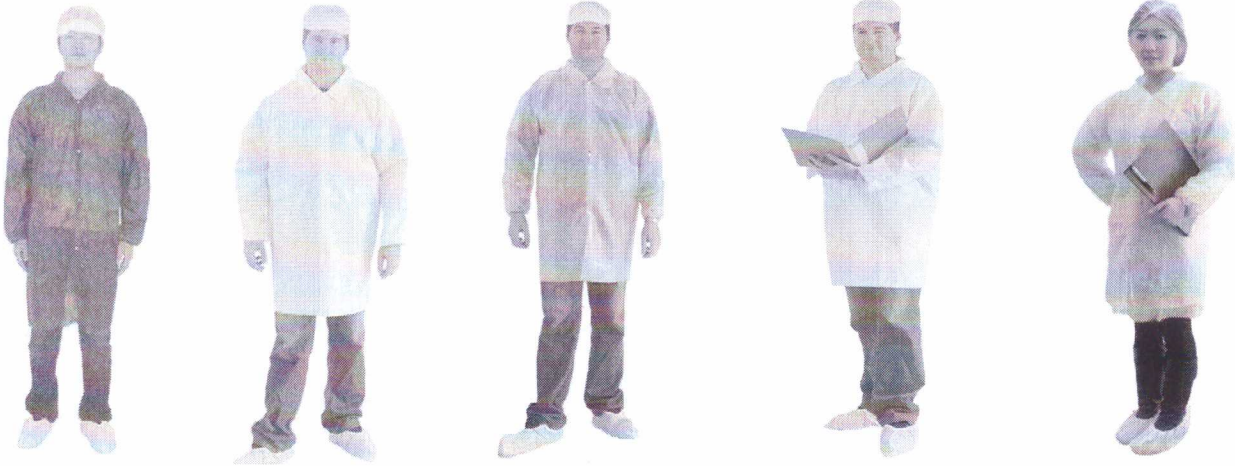

Basic Specifications

- Item code: #XYBL016,
- Material: Nonwoven SPP 30gsm, available from SPP20gsm to SPP80gsm
- Colors available: white, light blue, dark blue, green, red, yellow etc
- Size available: size S-2XL and other size available
- Style and design: single shirt collar, elastic wrists, no pockets, 4 velcro
- Regular Pack: 1pc/bag, 100pcs/ctn

Style Variations:

- Item code: #XYBL011 single shirt collar, open wrists, 4 snaps
- Item code: #XYBL012 single shirt collar, elastic wrists, 4 snaps
- Item code: #XYBL013 single shirt collar, elastic wrists, 2 pockets, zipper front
- Item code: #XYBL014 single shirt collar, elastic wrists, zipper front
- Item code: #XYBL015 knit collar, knit wrists, 3 pockets, 4 snaps
- Item code: #XYBL016 single collar, elastic wrists, 4 velcro fastening
- Item code: #XYBL017 mandarin collar, elastic wrists, 4 snaps
- Item code: #XYBL018 single collar, elastic wrists, 2 pockets, zipper front

Description of Product

Nonwoven SPP lab coat are made from breathable, non-toxic, comfortable and soft spunbonded polypropylene(SBPP) material which is commonly used in clean& hygiene rules, laboratory, clean room, hospital I& medical, food industry etc environment. It's ideally for economical way to protect against dust particles and dirty in the work area. Fruitful style designs bring a lot of choices and application.

Features

- Made of non-woven breathable, soft, non-toxic and comfortable material
- Fruitful style designs according to customized requirement
- Ideal for dust and dirty protection
- Wide range application

Suggested Application

- General hygiene and cleaning rules
- Hospital and Medical
- Food industry
- Clean room
- Household, Hotel etc

Storage

Please stock the goods in dry environment and avoid direct sunlight. Please don't stock the goods in hot environment to temperature above 50°C and humid above 80%. To keep away from high frequency equipment. Generally the shelf life is 6 years. We suggest you use products within 3 years.

Instruction for use

Please make sure the lab coat is well sewn and there is no hole and defect. The elastic band(knit wrists) at cuffs is in good quality. Open the snaps or zipper or Velcro fastening firstly, then put arms into sleeves. Make sure the coat size is fit body well. Please don't re-use.

International care symbols:



Do not wash



Do not iron



Do not machine dry



Do not dry clean



Inflammable. This garment is expressly constructed as a protection against chemical hazards, and should not, under any circumstances, come into contact with naked flame, or be used