

## Features :

1. Two options: Type A: Only Temperature, NOT AVAILABLE

Type B: Temperature & Humidity Detection 2 in 1 .

2. Built-in Rechargeable battery : can be powered by external DC5V power supply or standby battery (Please note : if you want to power the detector via backup battery , Please open the back cover and switch on the detector) .

3. Temperature Unit is optional (Centigrade or Fahrenheit) .


4. Check the History Record of temperature or humidity anytime.

5. Multi -User Supervision Supported : you can click to share the device to other users .

6. Built-in Buzzer : the Buzzer will sound when the detector was triggered.

7. APP : you can download it by searching for Tuya Smart or Smart Life, support android IOS smartphone


**Please note : The main device can not put into water ; Not support Waterproof . The "Type A Only Temperature ", the Temperature probe support put into water ; The "Type B Temperature and Humidity " , the Temperature Humidity probe can not put into water.**

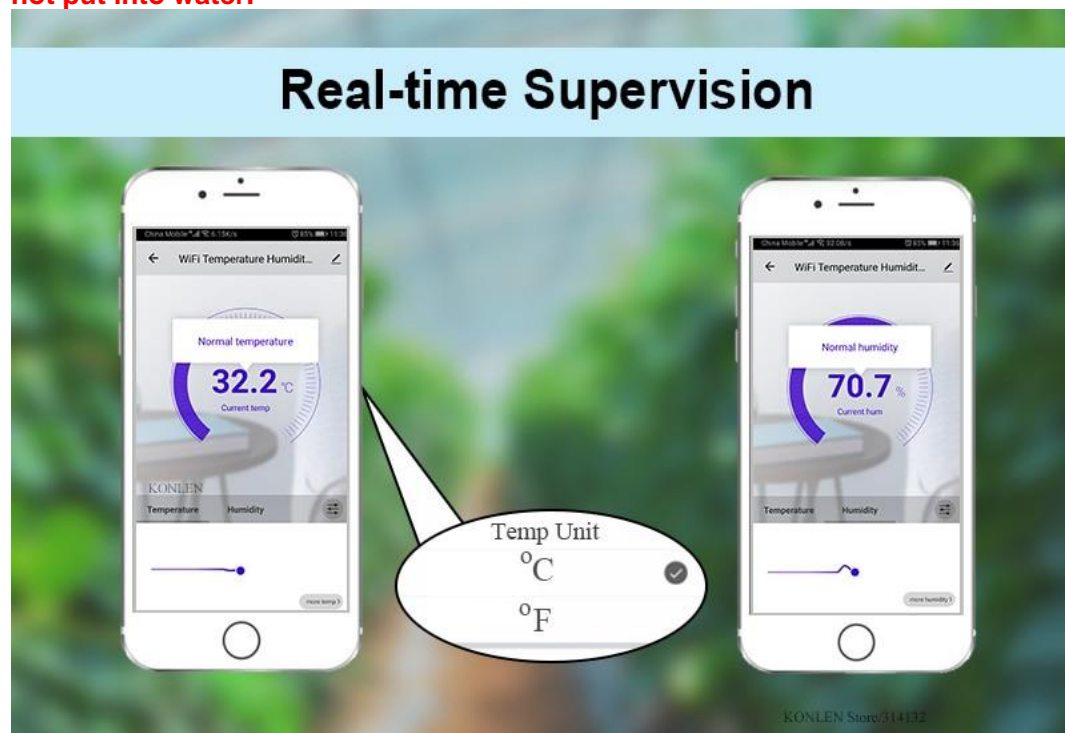

Real-Time Supervision : you can check the temperature or humidity anytime .


and the temperature unit is optional (Centigrade or Fahrenheit) .

## Temperature & Humidity Alarm Alerts

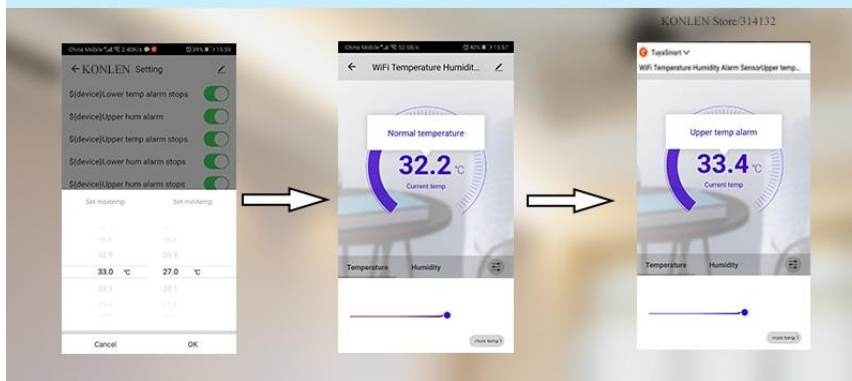

### 2 .Set upper and Lower limit value of temperature alarm


For example : Set the temperature range ( 27~33 centigrade degree ) .when the temperature in house is within the temperature range , the detector will work normal . if the temperature is lower than 27 centigrade degree or higher than 33 centigrade degree , the app will push alarm alerts and the Buzzer will sound at the same time .

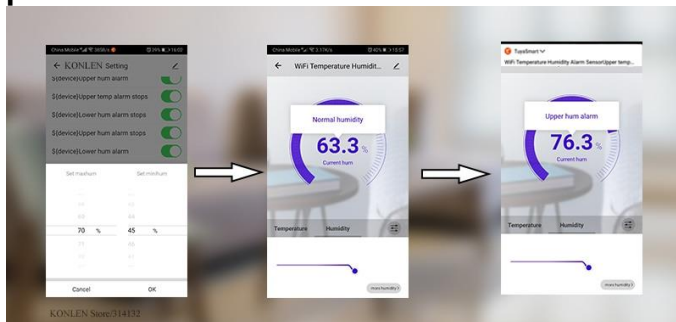

### 3 .Set upper and Lower limit value of humidity alarm

For example : Set the humidity range ( 45%~70% RH) .when the humidity in house is within the humidity range , the detector will work normal . if the humidity is lower than 45% RH or higher than 70% RH , the app will push alarm alerts and the Buzzer will sound at the same time .

## History Record

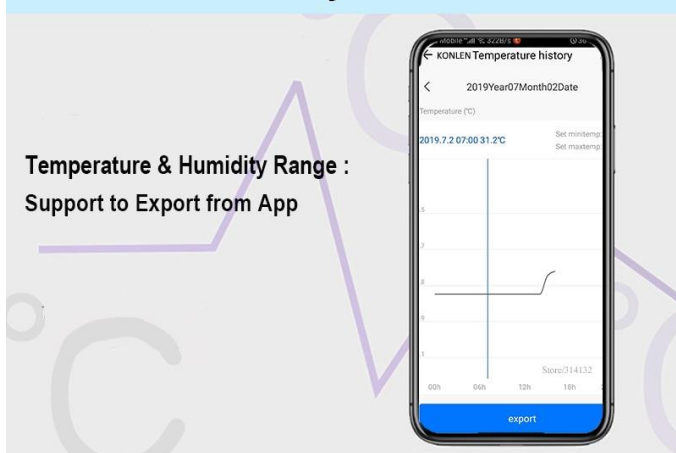

4.The history record of temperature / humidity can be exported anytime.

## Multi -User Supervision Supported



5. Multi-User Supervision Supported : you can click to share the device to other users .

## Product Show



Two options: Type A: Only Temperature, **NOT AVAILABLE**  
Type B: Temperature & Humidity Detection 2 in 1 .


Type A: only Temperature




Type B: Temperature +Humidity



## Temperatue & Humidity Alarm Alerts

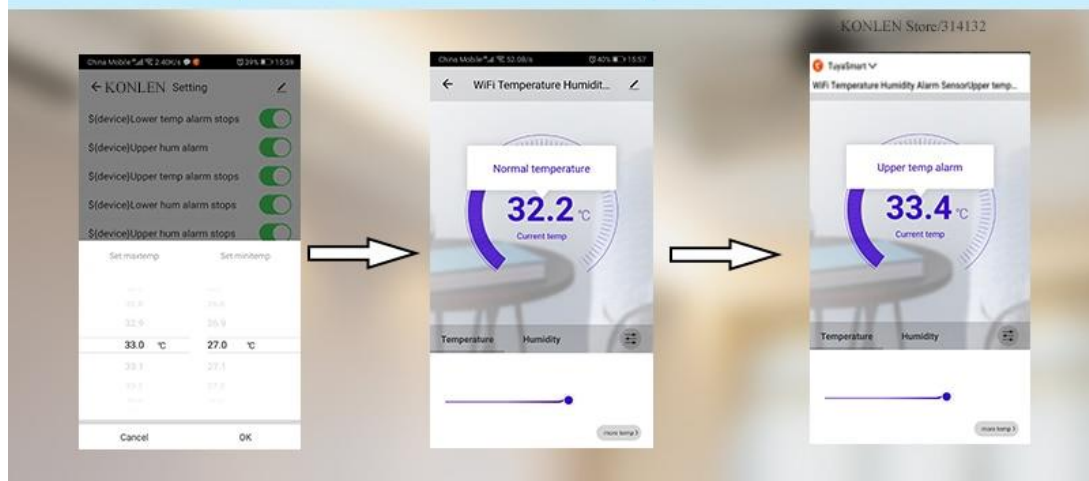

1. You can download the app by Searching for "Tuya Smart " or "smart life" in google play or App store
2. After register , you can add the detector via click " + " .
3. Clcik " Security & Sensor" and choose the Sensor (WI-FI ) to configure .

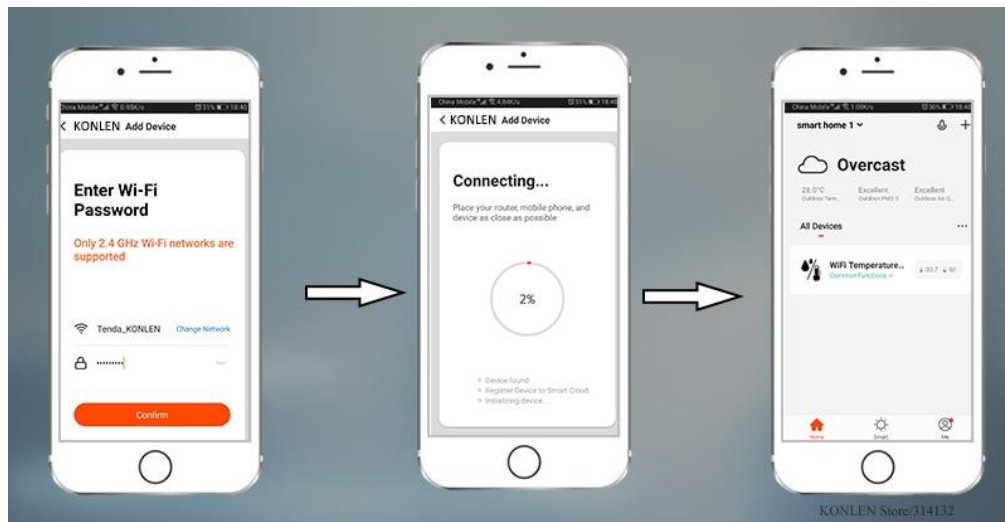

4 . Long press pairing key for 6-12 seconds until the green led flashes rapidly (5 times one second) and then the device is in the pairing mode , Select your wifi router and input the password .

5. Click to configure the device .

### Product Parameters

Powered by: DC5V 1A power adapter (included)

Built-in rechargeable battery: 3.7V 600MA

Note: the backup battery switch located at circuit board. For the first time use, please remember to open the back cover, then switch on backup battery switch.

Battery standby time: about 6 hours

Alarm Indication: The digital tube number flashes

Pairing indication: Green indicator flashes

Detecting temperature: -40°C to +120°C

Detecting Humidity: 0% to 99% (no condensation)

Temperature humidity accuracy: 0.5°C 1%RH

Measurement error:  $\pm 1^{\circ}\text{C}$   $\pm 3\%\text{RH}$

WIFI band: 2.4G ( not support 5G)

Buzzer alarm time: default 15 seconds uncontrollable

Size: 90mm x 63mm x 25mm

Note: The temperature humidity sensor with 1 meter cable can be used for indoor and outdoor detection, but the digital display panel is not waterproof, it must be located indoor.